



As trustee for The Whytehouse Family Trust

NSN SOLOSAFE: GETTING TO KNOW YOUR DEVICE






As trustee for The Whytehouse Family Trust

NSN SOLOSAFE: WHAT YOU WILL GET



PERSONAL
EMERGENCY DEVICE
& BOX

CHARGING CRADLE

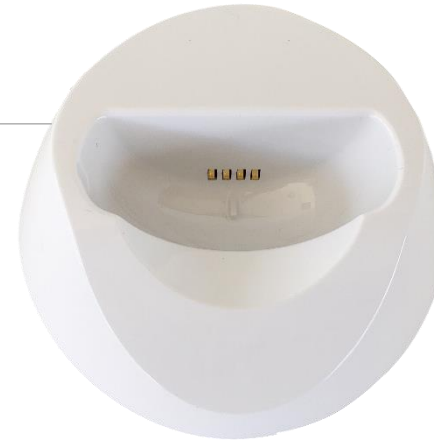

USB CHARGING CORD



POWER PLUG





As trustee for The Whytehouse Family Trust

NSN SOLOSAFE: GETTING TO KNOW YOUR DEVICE





As trustee for The Whytehouse Family Trust

NSN SOLOSAFE: USING YOUR DEVICE

DEVICE CHARGING:

For the first time use, please fully charge the battery for around 2-3 hours.

USING THE USB CHARGER OR DOCKING STATION TO CHARGE:

- Place the device on the docking station
- Connect the micro USB side of the cable to the docking station port and connect the other end of the cable to the designated AC power plug (USB/AC adaptor)
- When charging, the RED LED (on docking station) will display a bright RED LIGHT. After fully charged, the RED LIGHT will be dimmed

SWITCHING THE DEVICE ON & OFF:

- To turn on the device, press the side button until the device vibrates, all LED's will flash rapidly. The device can also be turned on automatically by charging via the USB or docking station.
- To turn off the device, press and hold the side button and the SOS button together until the device vibrates & LED's turn off.

WHAT DO THE LIGHTS MEAN?

LED	BLUE ON (SOLID)	BLUE BLINKING QUICKLY	BLUE BLINKING SLOWLY	GREEN BLINKING EVERY 3 SECONDS
STATUS	THE DEVICE IS CHARGING	BATTERY POWER IS LOWER THAN 15%	DEVICE HAS BEEN FULLY CHARGED	GPS SIGNAL

SENDING AN SOS ALERT:

- Hold down the SOS button until the device vibrates, in approximately 30 seconds, our operators will have 2-way communication to the user (if opted for 2-way communication) if opted for 1-way communication, please allow 30 seconds for audio to be delivered back to operators.
- Please do not press the SOS button again as this can 'hang up' your duress to our operators